




## Quick Setup Guide

### Buttons & basic commands

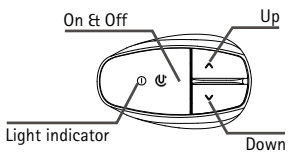

On:  
press 2 sec.



Volume up:  
press once




Off:  
press 5 sec.




Volume down:  
press once

### Charging

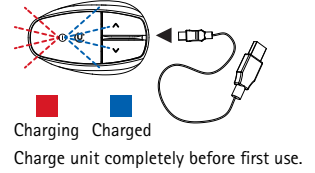


Charging Charged  
Charge unit completely before first use.

### Pairing with other devices

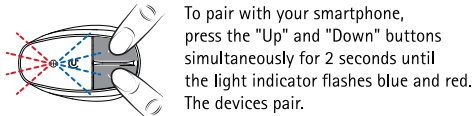

To pair with your smartphone, press the "Up" and "Down" buttons simultaneously for 2 seconds until the light indicator flashes blue and red. The devices pair.


With CLEARLink app (free) you can do individual adjustments & updates.

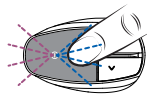

To pair with Bluetooth headphones, turn off the device. Then press and hold the "On" button for 15 seconds. The light indicator first flashes purple, then blue. The devices pair.

When the device is switched off, it remembers the paired Bluetooth connections.


### Speaker

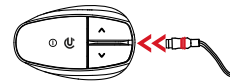


Insert USB plug of the cable headphones until the 3 ribs on the plug disappear completely into the USB socket.

### Connecting intercom devices


1. All devices should be turned off.
2. Turn on the first device by pressing the "On & Off" button and the "Down" button at the same time. The status indicator flashes purple.
3. On the second device, press the "On and Off" button and the "Up" button simultaneously for 5 seconds.
4. Repeat step 3 for all other devices immediately. If all devices are activated, continue to step 5.
5. All devices should now flash green and/or blue. To complete the pairing process, press the "On and Off" button once on the last device.
6. Turn off all devices to save the connection. The next time you activate them, the devices will recognize each other automatically (see "Activate / deactivate intercom").

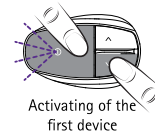

Activating of the first device

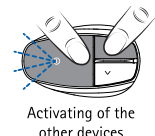

Activating of the other devices

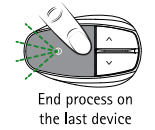


End process on the last device

### Activate / deactivate intercom

To reactivate intercom mode after the devices have been switched off or intercom has been deactivated, first activate the device(s). Then hold down the "Up" button on each device for 2 seconds. A signal tone sounds.




To deactivate intercom mode, press and hold the "Down" button on a device for 2 seconds.

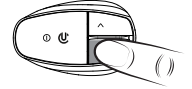

### Private intercom group

If there is an intercom group, a private group can be set up. To do this, press the "On & Off" button and the "Up" button on the affected devices at the same time until the status display flashes purple. Then briefly press the "On & Off" button on the second device.

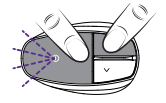

Briefly press the "On & Off" button to return to the entire group. The same applies to getting into private group.


### Reset

For full reset please press all three buttons at the same time for 2 sec.

### S.O.S. function U-SAFE




The devices have a manual S.O.S. Mode: The U-SAFE S.O.S. Mode allows the rider to manually trigger an emergency notification (after setting up U-SAFE in the CLEARLink app). When S.O.S is triggered, U-SAFE attempts to transmit the emergency notification immediately.

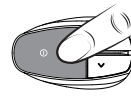

Tap the "On & Off" button 5 times, then again to activate S.O.S. to confirm. Without the 6th confirmation, S.O.S. will cancel sending the emergency notification.

It is also possible to store emergency contacts via the U-SAFE area in the CLEARLink app. More information in the app.

### Phone functions

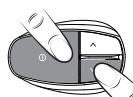

**Answer call**  
Say "Hello" or press "On & Off" once.





**End call**  
Press "On & Off" for 2 sec.

**Redial last no.**  
Press "On & Off" and "Up" for 2 sec.

**Voice dial**  
Press "On & Off" and "Down" for 2 sec.

Please make sure that your smartphone is connected to the device in advance. (s. a.).

### Music functions

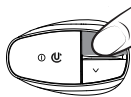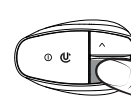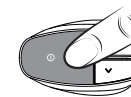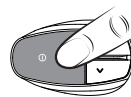

**Play music**  
Press "On & Off" twice.

**Stop music**  
Press "On & Off" once.

**Backtrack**  
Press "Down" twice.

**Fast forward**  
Press "Up" twice.

Please make sure that your smartphone is connected to the device in advance. (s. a.).

Please read the complete operating instructions, which can be found at [www.usg-reitsport.de/downloads](http://www.usg-reitsport.de/downloads) or through the QR code shown here.



USG United Sportproducts Germany GmbH  
[www.usg-reitsport.de](http://www.usg-reitsport.de)



WEEE DE 76639754



Download  
CLEARLink

Android



iOS

## **EquiCoach® 4.2 Intercom System**

### **User Guide**

#### **Table of Contents**

1. About This Guide & Manufacturer Information
2. Safety Information
3. Product Overview
4. Getting Started
5. Using the Device
6. Care, Maintenance & Storage
7. Disposal
8. Technical Specifications
9. Warranty
10. EU Declaration of Conformity

#### **1. About This Guide & Manufacturer Information**

This User Guide is an integral part of the product. Please read it carefully before first use and keep it for future reference.

##### **Manufacturer**

USG United Sportsproducts Germany GmbH  
Industriestraße 6  
63633 Birstein, Germany  
Phone: +49 (0)6054 / 90977-0  
Email: [web3@usg-reitsport.de](mailto:web3@usg-reitsport.de)  
Website: [www.usg-reitsport.de](http://www.usg-reitsport.de)

#### **2. Safety Information**

##### **2.1 Intended Use**

The EquiCoach® 4.2 is designed for wireless group communication in sports and leisure environments.

Proper use includes:

- following all instructions in this guide
- use by capable and trained individuals

Any other use is considered improper and may result in injury or damage.

## **2.2 Safety Signal Words**

### **WARNING**

Indicates a hazardous situation that could result in serious injury or death.

### **CAUTION**

Indicates a situation that could result in minor or moderate injury.

### **NOTICE**

Indicates information related to product damage or malfunction.

## **2.3 General Safety Instructions**

### **WARNING – Distraction Hazard**

Using the device may reduce your awareness.

- Use only in controlled environments.
- Do not operate the device during critical moments.

### **CAUTION – Hearing Damage**

- Avoid prolonged exposure to high volume levels.
- Ensure that surrounding sounds remain audible at all times.

### **WARNING – Battery Hazard**

- Do not open, damage, or incinerate the battery.
- Use only approved charging equipment.
- Charge only within 0 °C to 45 °C (32 °F to 113 °F).

### **NOTICE – Product Damage**

- Do not drop or impact the device.
- Do not attempt to repair or modify the device.

## **3. Product Overview**

### **3.1 Description**

The EquiCoach<sup>®</sup> 4.2 is a wireless intercom system designed for real-time voice communication between multiple users.

### **3.2 Package Contents**

- Intercom unit(s)

- Charging accessories
- Headset
- Mounting components
- Adapter

### **3.3 Key Features**

- Group intercom communication
- Bluetooth connectivity
- Real-time voice transmission

## **4. Getting Started**

### **WARNING – Pre-Use Check**

Before each use:

- Inspect the device for visible damage
- Use only fully functional components

### **Setup**

- Fully charge the device
- Pair with other devices (see Quick Start Guide)
- Test functionality in a safe environment

## **5. Using the Device**

### **5.1 General Use**

- Use only in safe and controlled situations
- Adjust settings only while stationary

### **5.2 Volume Adjustment**

### **CAUTION – Risk of Hearing Damage**

- Increase volume gradually
- Avoid maximum volume levels

## **6. Care, Maintenance & Storage**

### **NOTICE – Cleaning**

- Clean with a soft, dry cloth only

- Do not use harsh or abrasive cleaners

**NOTICE – Storage**

- Store in a dry, dust-free environment

**7. Disposal**

Do not dispose of this product with household waste.

WEEE Registration No.: DE76639754

Battery Registration No.: DE 72907628

**8. Technical Specifications****Connectivity**

- Bluetooth 4.2 (BR/EDR/BLE), Class 1
- Profiles: HSP, HFP, A2DP, AVRCP
- Frequency Range: 2.402 – 2.480 GHz

**Intercom**

- Range: up to 700 m (open field)
- Users:
  - 2–4 users (EquiCoach<sup>®</sup> 4.2)
  - 4+ users (EquiCoach<sup>®</sup> X.2)

**Power**

- Talk Time: up to 10 hours
- Standby Time: up to 400 hours
- Battery: 3.7 V / 500 mAh Lithium-ion

**Environmental Conditions**

- Operating Temperature: –30 °C to +60 °C (–4 °F to 140 °F)
- Charging Temperature: 0 °C to 45 °C (32 °F to 113 °F)

**Physical**

- Dimensions (W × H × D): 60 × 40 × 18 mm

**Compatibility (Optional App)**

- Android 4.4 or later
- iOS 8 or later

*Note: Range and battery performance may vary depending on environment and usage.*

## **9. Warranty**

This product is covered by statutory warranty rights.

## **10. EU Declaration of Conformity**

USG United Sportsproducts Germany GmbH hereby declares that this product complies with Directive 2014/53/EU (RED).

The full EU Declaration of Conformity is available at:

[https://usg-reitsport.de/\\_gs\\_includer\\_/zertifikate/Konformitaetserklaerung\\_CE\\_USG\\_EquiCoach.pdf](https://usg-reitsport.de/_gs_includer_/zertifikate/Konformitaetserklaerung_CE_USG_EquiCoach.pdf)

## **11. Product Identification**

Product Name: EquiCoach® 4.2 Intercom System

## **12. Disclaimer**

Use of this product is at your own risk.

The manufacturer shall not be liable for damage resulting from:

- improper use
- failure to follow this guide
- unauthorized modifications